 
 
 
 


No film output on this page




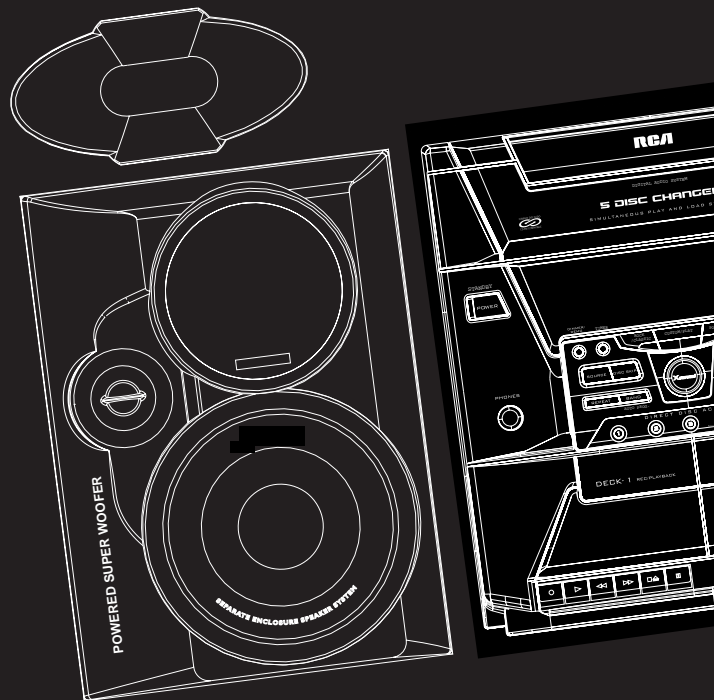

Thomson multimedia Marketing Australia Pty Ltd.  
Level 6, 7 Macquarie Place  
SYDNEY NSW2000  
AUSTRALIA

55523540

# RCA

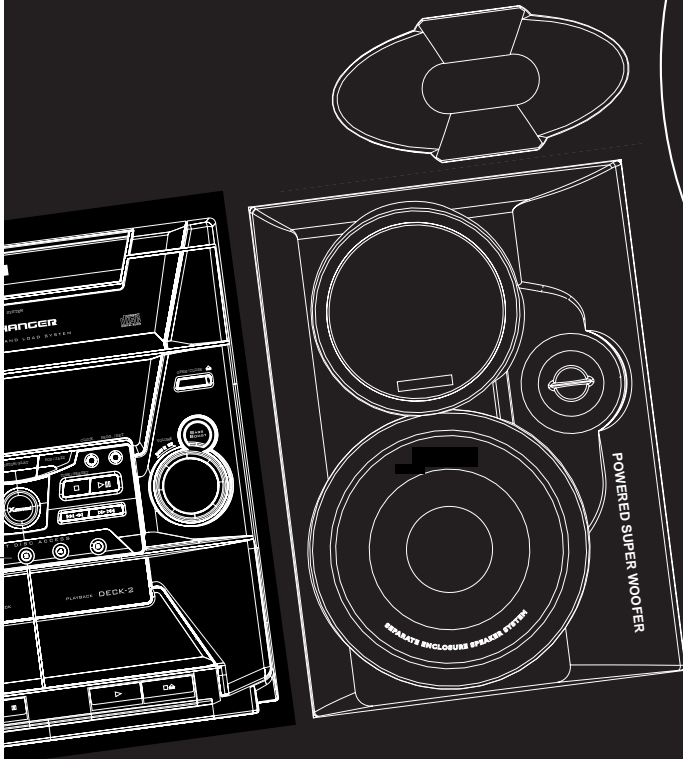 

u  
s  
e  
r  
m  
a  
n  
u  
a  
l

RS2606EA

# Safety Information

EN

## CAUTION!

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER  $\lambda$  = 780 nm, P max = 5 mW

Rating Information: At bottom of the unit this unit comply with the existing requirements

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.

Please respect the environment Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Have a Blast- Just Not in Your Eardrums

Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

ADVARSEL!  
USYNLIG LASERSTRÅLING VED ÅBNING NÅR  
SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION.  
UNGDA UDSÆTTELSE FOR STRÅLING.  
VORSICHT!  
UNSICHTBARE LASERSTRALUNG  
WENN ABDECKUNG GEÖFFNET UND SICHERHEITS-  
VERRIEGELUNG ÜBERBRÜCKT.  
NICHT DEM LASERSTRAHL AUSSETZEN!

CAUTION - INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS FAILED OR  
DEFEATED. AVOID EXPOSURE TO BEAM.

 
ATTENTION - RAYONNEMENT LASER INVISIBLE  
DANGEREUX EN CAS D'OUVERTURE ET LORSQUE  
LA SECURITE EST NEUTRALISEE.  
EXPOSITION DANGEREUSE AU FAISCEAU.



CLASS 1 LASER PRODUCT  
LASER KLASSE 1  
APPAREIL A LASER DE CLASSE 1  
LUOKAN 1 LASERLAITE  
KLASS 1 LASERAPPARAT

WARNING-  
OSYNLIG LASERSTRÅLING NÅR DENNA DEL  
ÄR ÖPPNAD OCH SPÄRRAN ÄR URKOPPLADE.  
BETRAKTA EJ STRÅLEN.  
VARO!  
Ä/ÄTTÄESSÄ JA SOUJALUKITUSOHITETTAESSÄ  
OLET ALTTIINA NÄKYMÄTTÖMÄLLE.  
LASERSÄTEILYLLE ÄLÄ KATSO SÄTEESEEN.

## AC Power



Important: This set operates on power 240V~50Hz and the power cord is supplied with SAA plug. It complies with AS/NZS 3250.

FOR ALL YOUR SERVICE NEEDS AND ENQUIRIES ABOUT THIS PRODUCT, RING 1-800-000-155. (ONLY APPLICABLE IN AUSTRALIA).



THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

# Contents

EN

## Safety Information

## Installation .....2

## Controls & Indicators

Main Unit .....	3
Tape Player .....	3
Remote Control .....	4

## Display

Showing the Demonstration .....	5
Display Timer/Clock .....	5
Setting the Time .....	5
Setting the Timer .....	5
Activating the Timer .....	5
Adjusting the Display .....	5
Brightness .....	5
Sleep Mode .....	5

## Sound Features

Using Preset Equalizer Curves .....	6
Creating a Custom Curve .....	6

Bass Boost .....	6
Muting Audio .....	6
X-Surround .....	6

## CD Player

Loading Discs .....	6
Playing Discs .....	6
Shuffling the Play Order .....	6
Sampling Tracks .....	6
Repeating the Play Order .....	7
Setting Up a CD program .....	7
Playing a Program List .....	7
Displaying the Program list .....	7
Deleting a Program List .....	7
Skipping a Disc .....	7
Searching through a CD .....	7

## Tuner

Tuning to a Station .....	8
Using Presets .....	8
Auto Preset Program (for FM only) .....	8
Setting Presets .....	8
Suppressing Stereo Signal .....	8

## Tape Player

Playing a Tape .....	9
Continuous Play .....	9
Recording .....	9
From Tuner .....	9
From CD .....	9
Tape to Tape .....	9
From an Auxiliary Input .....	9

## Troubleshooting Tips

.....	10
-------	----

 
## Maintenance

Cleaning .....	11
CD Player .....	11
Tape Player .....	11

## More Information ....12

# Installation

EN

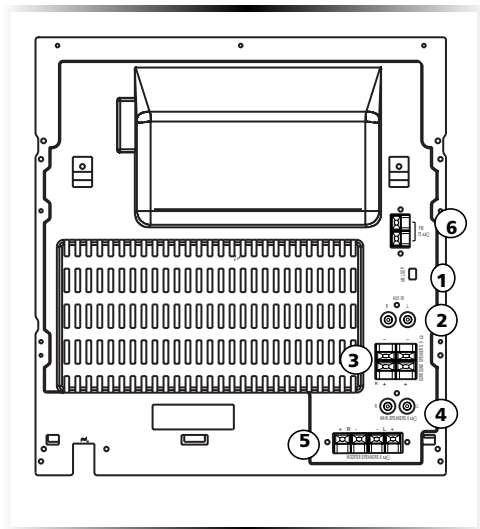



1. AM Loop Antenna Connector
2. Auxiliary Connector
3. Surround Speaker Jacks
4. Main Speaker Jacks
5. Subwoofer Speaker Jacks
6. FM Antenna Jack

## Unpacking the system:

  
You should have:

- one main unit (with 2 speakers);
- surround speakers
- one remote control;
- one AM loop antenna;
- T-Type FM antenna wire;
- one user's guide;

To ensure sufficient ventilation, keep the spacings shown below free from other surfaces:

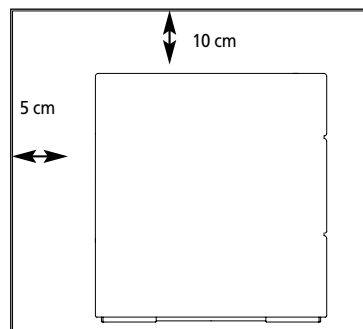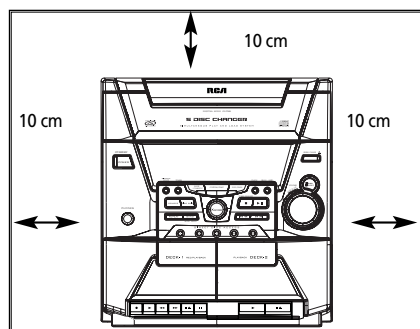

## Antenna and Speaker Wire Connection

 

Push terminal tab down to insert wire.



Release tab to lock wire in the terminal.

**NOTE:** Make sure the insulation is completely removed from the ends of the Antenna and speaker wires at all connection points.

# Controls and Indicators

EN

## Main Unit

**OPEN/CLOSE** — Opens or closes the disc tray.

**DISC 1 - DISC 5** — Selects disc 1, 2, 3, 4, or 5


**DISC SKIP** — Skips to the next CD in the tray


**STANDBY/POWER** — Turns power on or off (STANDBY mode).


**PHONES** — Jack for connecting headphones


**SOURCE** — Selects the CD player/tuner/ tape player/ external source

**DIMMER/DEMO** — Turns the feature demonstration on or off, adjusts display brightness.

 **STOP / TUNE / PRESET** — Stops CD track, sets tune or preset mode

 **SKIP FORWARD** — Increments radio frequency, CD tracks or setting options.

 **SKIP BACKWARD** — Decrements radio frequency, CD tracks or setting options

 **PLAY/PAUSE** — Plays or pauses CD

**CLOCK** — Shows clock time and enters clock setting mode.

**TIMER** — Enters timer setting mode and turns the mode on/off.

 
**BAND/AUTO PROG.** — Changes between FM and AM tuner bands. Enters auto preset program in FM mode.

**REPEAT** - Selects among repeat modes.

**PROG./SET-** enters program or setting mode for CD & tuner mode.

**BASS BOOST** — Turns Bass boost on or off

**ROCK/CLASSIC, CUSTOM/FLAT, POP/JAZZ** — selects among the different EQ modes.

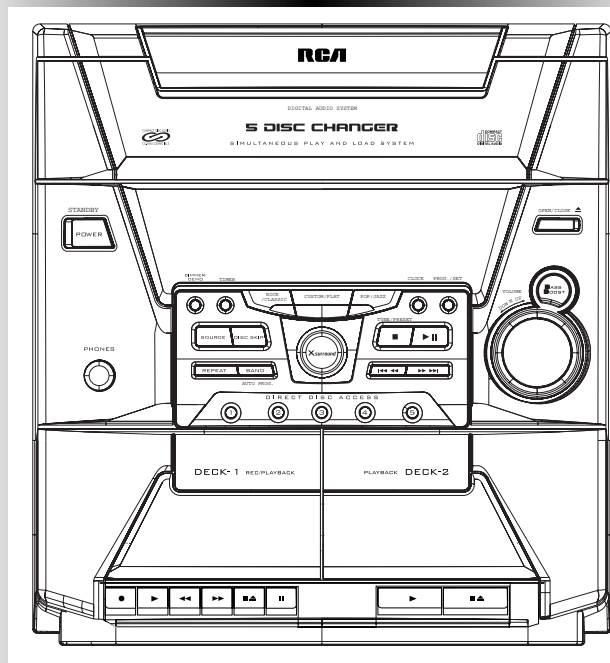

**X-SURROUND** — Press once to display current setting, press again while the setting is shown on display to toggle Bass Boost on / off.

**VOLUME** — Increases/ decreases volume.

## Tape Player

- RECORD
- ▶ PLAY
- ◀◀ REWIND
- ▶▶ FAST-FORWARD
- STOP/EJECT
- || PAUSE



Tip: In **STANDBY** mode (press **POWER** off), the system displays the time. Press **POWER** to turn the system on in the previously used mode. Press **CD**, **TAPE**, **TUNER**, or **AUX (Remote Only)** to select the corresponding mode. Look at the display icons to identify the current mode.

# Controls and Indicators

EN

## Remote Control

**POWER** — Turns power on or off (**STANDBY** mode).

**TUNER** — Selects tuner

**CD** — Selects CD player

**TAPE** — Selects tape player

**AUX** — Selects external input.

**B-BOOST** - Turns B BOOST on or off

**VOL+ or VOL-** — Increases/ decreases volume

**EQ** — Selects equalizer presets

**PLAY/PAUSE** ►|| — Plays or pauses current CD

**STOP** — Stops playing CD

**NEXT/FWD** ►► — Increments CD track; searches through CD

**PREV/REV** ◀◀ — Decrements CD track; searches through CD  
(Press **NEXT/FWD** or **PREV/REV** to tune up/ down tuner frequency)

**DISC SKIP** — Skips to next CD

**REPEAT** — Repeats a track, CD, or all CDs.

**MUTE** - mutes sound

**SHUFFLE** — Turns on/off random listening

**FM ST.** - Toggles between FM stereo and mono

 
 
**INTRO** - Turns INTRO mode on or off to play the first 10 seconds of each track.

**PRESET UP/DOWN** — Selects next/ previous preset station

**OPEN/CLOSE** — opens/closes cd tray door

**SLEEP** - selects the time interval in minutes before the unit turns off

**X-SURROUND** - enables/disables X-surround feature

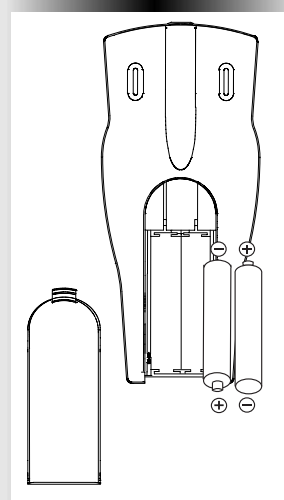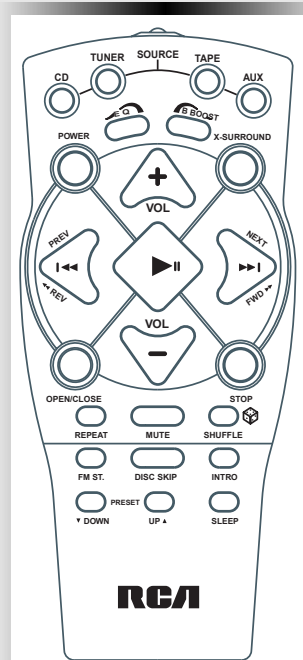


Battery Size:  
"AAA" or "UM-4" or "R03"



# Display

 EN

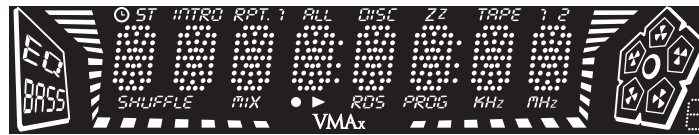

## Showing the Demonstration

Not operational in CD mode. Press **DIMMER/DEMO** to turn on/off demonstration mode. The demonstration scrolls through all display operations.

## DISPLAY TIMER/CLOCK

### Setting the Time

1. Press and hold **CLOCK** until the hour flashes on the display.
2. Press **SKIP BACKWARD** **◀◀◀** or **SKIP FORWARD** **▶▶▶** to set the hour and then press **CLOCK** to shift to minute digits.
3. Press **SKIP BACKWARD** **◀◀◀** or **SKIP FORWARD** **▶▶▶** to set the minute.
4. Press **SET** to save settings and **STOP** to quit setting.

Note: When system is ON, you can press **CLOCK** to display the current time for about 2 seconds.

### Setting the Timer

1. Press and hold **TIMER** until the **ON** appear with the hour flashing ( **ON** - timer on time )
2. For setting time, press **SKIP FORWARD** **▶▶▶** / **BACKWARD** **◀◀◀** to set the hour and then press **TIMER** to shift to minute digits.
3. Press **SKIP FORWARD** **▶▶▶** / **BACKWARD** **◀◀◀** to set the minute.
4. Press **TIMER** to change to **OF** (timer off time) with hour flashing. Repeat steps 2 & 3 for timer off time setting.
5. Press **TIMER** to select source. Press **SKIP FORWARD** **▶▶▶** / **BACKWARD** **◀◀◀** to select between CD /TUNER / TAPE)
6. Press **TIMER** to set volume. Rotate the VOLUME knob to set desired volume level.
7. Press **SET** to save settings or **STOP** to quit setting.

## Activating the Timer

Press and release **TIMER** to turn on/off the alarm. The alarm is active when the clock icon indicator is lit.



## Adjusting the Display Brightness

1. Press and hold **DIMMER/DEMO** for more than 2 seconds.
2. While the dimmer is displayed, press and release **DIMMER/DEMO** to select the desired level (**DIM 0 - 3**).



## Sleep Mode

You can select the time interval in minutes before the unit turns off automatically. Press **SLEEP** on the remote to select among 120, 90, 60, 45, 30, 15 & 5 minutes. (Remote Only)

# Sound Features

EN

## Using Preset Equalizer Curves

Press **ROCK/CLASSIC**, **CUSTOM/FLAT**, **POP/JAZZ** on the main unit or **EQ** on the remote to toggle among **FLAT**, **ROCK**, **JAZZ**, **POP**, **CLASSICAL** & **CUSTOM**. The display shows briefly the selection.

## Creating a Custom Curve

1. Press **CUSTOM/FLAT** to select **CUSTOM** mode.
2. While "**CUSTOM**" is displayed, press **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to cycle among displayed bass-, and treble - range levels.
3. While **BAS** or **TRE** is displayed, adjust **VOLUME** to set the associated gain between -10 - +10.

TRE+08

## Boosting the bass

Press **Bass Boost** to turn on/off boosting the bass frequency.

## Muting Audio

Press **MUTE** on the remote to cut the sound. (Remote Only)

MUTE

## X-Surround

Press **X-SURROUND** to enjoy enriched sound quality. This feature gives you:

1. Better width and depth for vocal and instrumental sound.
2. More powerful presence for studio recording.
3. Enhanced surround effects with greater flexibility in positioning speakers.

## CD PLAYER



## Loading Discs

1. Press **SOURCE** repeatedly to select **CD** mode.
2. Press **OPEN/CLOSE** to open the drawer.
3. Insert up to five discs with label face up. (Press **DISC SKIP** to rotate the disc carrier.)
4. Press **OPEN/CLOSE** to close the drawer. Loaded disc position icon lights.

## Playing Discs

Press **PLAY/PAUSE** to begin or pause play, and **STOP** to stop play.

Select a specific disc by pressing **DISC 1 - DISC 5**.

Press **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to select a specific track.

## Play and load simultaneously by:

1. Press **OPEN/CLOSE** to open the tray while a CD is playing
2. Load/change discs for available trays by pressing **DISC SKIP**.
3. Press **OPEN/CLOSE** to close the tray.

## Shuffling the Play Order

Press **SHUFFLE** to turn on/off the playing of tracks in random order. (Remote Only)

## Sampling Tracks

Press **INTRO** to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn **INTRO** mode off. (Remote Only)

(Note: You may also press **REPEAT** to select 1 disc or all discs before activating **INTRO** & **SHUFFLE** functions)



Tip: While playing a CD, press and hold **SKIP-FORWARD** or **BACKWARD** for more than 2 seconds to search through the CD.

# CD Player

EN

## Repeating the Play Order

Press **REPEAT** to repeat the current track, current disc, all discs, or turn **REPEAT** mode off.

## Setting Up a CD Program

You can program the CD player to play up to any 32 tracks on the CDs in the tray.

1. While the CD player is stopped, press **PROG./SET** to enter program mode. The system displays the next available program number: "--P:01," with "--" flashing, prompts you for the first track in the program list.
2. Press **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to select a track (press **DISC SKIP** or **DISK 1** - **DISK 5** to select a track from a different disc).
3. Immediately press **SET** to assign the selected track to the program number. After 3 seconds, you are prompted for the next track in the program list. (In CD program mode, **PROG** icon will be lit.)



## Deleting Program List

While in **PROGRAM** mode, press and hold **STOP** for 5 seconds. The system displays the message **CLEAR**.

## Skipping a Disc

Press **DISC SKIP**.

## Searching Through a CD

 
Press and hold **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to search through a CD as it is playing.

## Playing a Program List

While in **PROGRAM** mode, press **PLAY**.

## Displaying the Program List

1. While the CD player is stopped, press **SET** to enter **PROGRAM** mode.
2. Press **SET** repeatedly to list each track assignment in the program list.

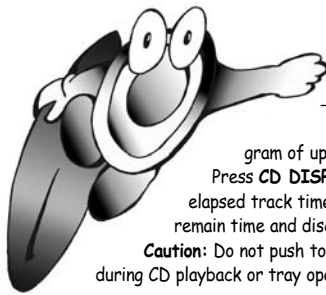


**Tips:** You can create a program of up to 32 tracks.

Press **CD DISPLAY** repeatedly to view elapsed track time, track number, track remain time and disc remain time.

**Caution:** Do not push to force closing of the tray during CD playback or tray opening.

# Tuner

 EN

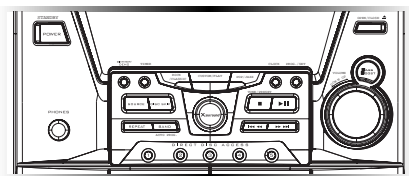

1. Press **SOURCE** to select **TUNER**.
2. Press **BAND** to select between AM or FM radio band.

Tip: Your audio system has 32 preset stations.

## Tuning to a Station

Press **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to select frequencies.

## Using Presets

87.50 MHz

The tuner can be either TUNE or PRESET mode.

When in PRESET mode, the PROG light is on.

Press **SKIP BACKWARD** **◀◀◀◀** or **SKIP FORWARD** **▶▶▶▶** on the main system or **PRESET UP** or **DOWN** on the remote control to access the previous or next preset station. The display first shows the preset program number and after a few seconds, the frequency and preset program number will be displayed. (FMPR:01 is FM preset 1)

Note: You can toggle between TUNE or PRESET mode by pressing **TUNE/PRESET** button.

## Auto Preset Programming (for FM only)

PR:01

Press and hold **BAND** button for 2 second to scan stations in the selected band. The stations will then be stored as preset channels. A Maximum 32 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. You can stop the automatic scan by pressing any but-

ton, but the erased stations cannot be recovered.

## Setting Presets

 
1. Press **SKIP FORWARD** **▶▶▶▶** / **BACKWARD** **◀◀◀◀** to access the desired frequency.
2. Press the **SET** button once.
3. The most recently accessed program location will be displayed.
4. If a different program location is preferred, press **SKIP BACKWARD** **◀◀◀◀** / **FORWARD** **▶▶▶▶** to move to the desired preset number (1-32).
5. Press **SET** to store the selected frequency at that preset.

## Suppressing Stereo Signal

Press **FM ST** to toggle between FM mono and stereo for stereo FM stations. (Remote Only)

# Tape Player

EN

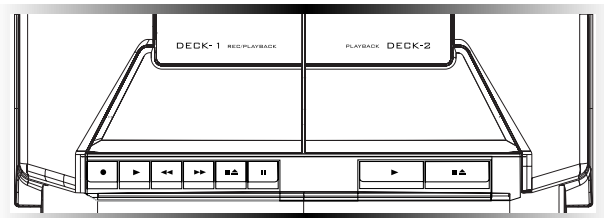

## Playing a Tape

Tip: You can play a tape from either deck.

1. Press **SOURCE** repeatedly to select **TAPE**.
2. Press **STOP/EJECT** ■▲ to open the cassette door.
3. Insert a tape into the door and push the door closed.
4. Press **REWIND** ◀◀ / **FAST FORWARD** ▶▶ to position the tape to the desired starting position. (Deck 1 Only)
5. Press **PLAY** ► to start playback.

## Continuous Play

1. Insert a tape into deck 2 and start playback.
2. Insert a tape into deck 1 and press **PLAY** ► and **PAUSE** || together.
3. When the tape in deck 2 finishes playback, **PAUSE** at deck 1 will be released automatically and start playback.

## Recording From Tuner

1. Insert a tape into deck 1.
2. Press **SOURCE** repeatedly to select **TUNER** and to access the desired radio band.
3. Tune to the station to be recorded.
4. Press **RECORD** ● to begin recording.

5. Press **STOP/EJECT** ■▲ to end recording.

## From CD

1. Insert a tape into deck 1.
2. Press **SOURCE** repeatedly to select **CD**.
3. Insert the disc(s) to be recorded.
4. Select the track, CD, or program to be recorded.
5. Press **RECORD** ● to begin recording.
6. CD begins to play.
7. Press **STOP/EJECT** ■▲ to end recording.

## Tape to Tape

1. Insert the destination tape in deck 1.
2. Insert the source tape into deck 2.
3. Press **PAUSE** || and then **RECORD** ● on deck 1.
4. Press **PLAY** ► on deck 2. The playback and recording start simultaneously.

## From an Auxiliary Input

1. Insert the cassette in deck 1.
2. Check that the auxiliary device has been connected correctly to the **AUX** connector on the back of the audio system.
3. Start playback on the auxiliary device.
4. Press **RECORD** ● on deck 1 to begin recording.
5. Press **STOP/EJECT** ■▲ to end recording.

# Troubleshooting Tips

EN

Problem	Solution	Problem	Solution
<i>System will not turn on</i>	<ul style="list-style-type: none"> <li>• Check power cord for a secure connection.</li> <li>• Unplug the unit for a moment, and then plug into power source again.</li> <li>• Check the outlet by plugging in another device.</li> </ul>	<i>CD button will not respond, or does not change discs when you press DISC SKIP</i>	<ul style="list-style-type: none"> <li>• Switch to another function (TAPE, Tuner) and then back to CD.</li> </ul>
<i>No sound</i>	<ul style="list-style-type: none"> <li>• Increase the volume setting.</li> <li>• Check connection to speakers.</li> <li>• Check that you have selected the appropriate function: CD, TAPE, Tuner.</li> <li>• Make sure mute is off.</li> </ul>	<i>Distorted or noisy tape recordings</i>	<ul style="list-style-type: none"> <li>• Inspect the tape heads, clean it if necessary.</li> </ul>
<i>Poor radio reception</i>	<ul style="list-style-type: none"> <li>• Check antenna connection.</li> <li>• Move antenna.</li> <li>• Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.</li> </ul>	<i>Remote control does not work</i>	<ul style="list-style-type: none"> <li>• Check that the batteries are properly installed.</li> <li>• Replace weak batteries.</li> <li>• Check the system is plugged into power source.</li> <li>• Point the remote directly at the system's front panel.</li> <li>• Move closer to the system.</li> <li>• Remove any obstacles between the remote and the system.</li> </ul>
<i>CD does not play</i>	<ul style="list-style-type: none"> <li>• Check that CD is in the tray.</li> <li>• Check that CD label is facing up.</li> <li>• Check that PAUSE mode is not on.</li> <li>• Check that CD function is selected.</li> <li>• Use CD lens cleaner.</li> <li>• Clean the disc.</li> </ul>		
<i>CD sound skips</i>	<ul style="list-style-type: none"> <li>• Clean the disc.</li> <li>• Check disc for warping, scratches, or other damage.</li> <li>• Check if something is causing the system to vibrate. If so, move the system.</li> <li>• Make sure the speakers are at least 3 feet away or on a different surface from the main unit.</li> </ul>		

# Maintenance

EN

Disconnect the audio system from the power source before performing any maintenance.

## Cleaning

Clean the exterior of the system using a soft dust cloth.

 
## CD Player

**CAUTION!** This system operates with a laser. It must be opened by only a qualified technician.


## Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

To protect recordings on one or both sides of a tape, remove the corresponding tab. If you later want to record on the tape, affix a piece of adhesive tape over the hole.



 Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

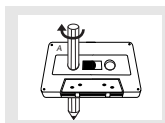

## Handling CDs

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs

## Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface

## CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

# More Information

EN

## Safety Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping and splashing.

## Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
  - if mixed with a different battery type,
  - if inserted incorrectly,
  - if all batteries are not replaced at the same time,
  - if disposed of in fire, or
  - if an attempt is made to charge a battery not intended to be recharged.

## Headset Safety

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
  - If you experience ringing in your ears, reduce volume or discontinue use.
  - You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

## Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for which it is not intended is unlawful and therefore not condoned by Thomson multimedia.

## Technical Specification

Power supply: 240V~50Hz  
 Dimensions (H x W x D mm):  
 Unit size - 329 x 306 x 390  
 Main Speaker - 329 x 240 x 230  
 Surround Speaker - 86x 175 x 68  
 Tape deck: Response curve: 125Hz-8kHz (-5dB)  
 CD player: Response curve (+/- 2dB): 60Hz to 15 kHz  
 Rating Plate: Look for it at the back of the set.